


RS-1301 CHEST PRESS

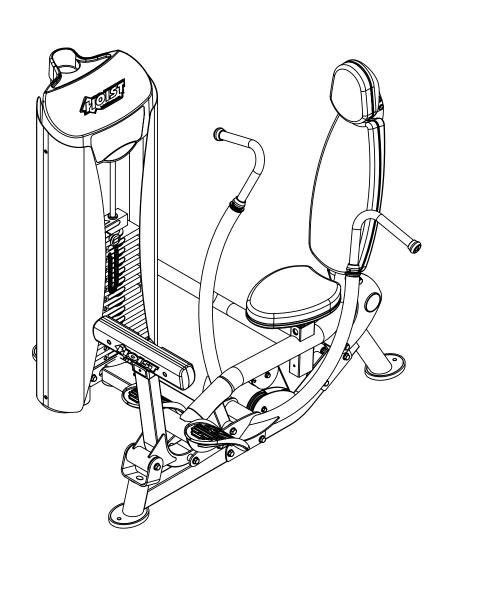

Note: Both Serial Number and Model Number are Required when Ordering Parts

RECORD SERIAL NUMBER HERE

CATALOG NUMBER

0406 - 013

Customer Service

(800) 548-5438

(858) 578-7676

<u>Fax</u>

(858) 578-9558

CONTENTS

INSTRUCTIONS 02
FRAME ASSEMBLY 04
PRE-ASSEMBLY 16
DECAL PLACEMENT 17
DECAL REFERENCE 18
PART LIST 20
ABBREVIATIONS 22
BOLT SIZING CHART 23
WASHER SIZING CHART 25
MAINTENANCE SCHEDULE 27
GENERAL MAINTENANCE INFORMATION 28
WEIGHT TRAINING TIPS 31
WEIGHT RATIOS 32
EXERCISE LOG 33
LIMITED WARRANTY 34

INSTRUCTIONS

Before beginning assembly please take the time to read instructions thoroughly. Please use the various lists in this manual to make sure that all parts have been included in your shipment. When ordering, use part number and description from the lists. Use only HOIST replacement parts when servicing. Failure to do so will void your warranty and could result in personal injury.

HOIST equipment is designed to provide the smoothest, most effective exercise motion possible. After assembly, you should check all functions to ensure correct operation. If you experience problems, first recheck the assembly instructions to locate any possible errors made during assembly. If you are unable to correct the problem, call your authorized HOIST dealer. Be sure to have your serial number and this manual when calling. When all parts have been accounted for, continue on.

TOOLS REQUIRED

Ratchet Wrench

1/2", 9/16" and 3/4" Sockets

Adjustable Wrench

Rubber Mallet


Tape Measure

Level

Hex Key Wrench Set


THIS PAGE WAS INTENTIONALLY LEFT BLANK

PAGE 03 RS-1301 ASSEMBLY

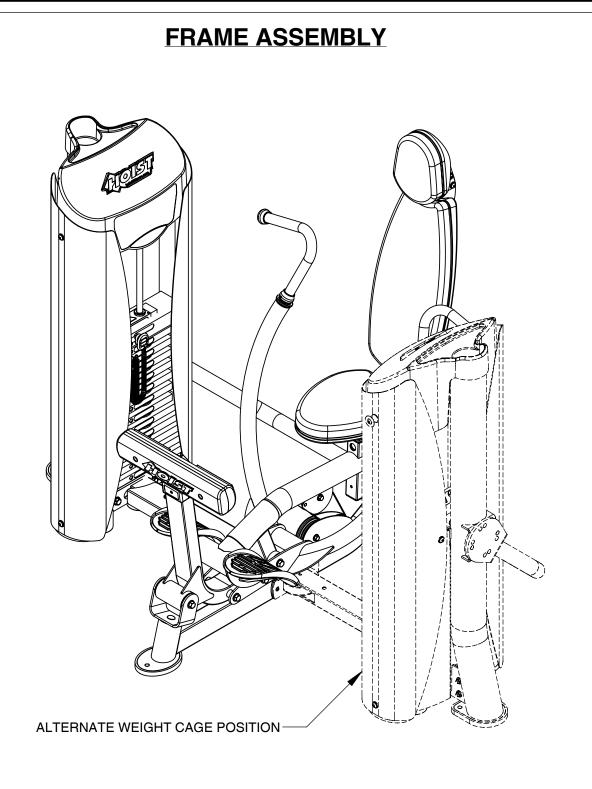



ALTERNATE POSITION


THE ROC-IT WEIGHT CAGE IS DESIGNED TO BE INSTALLED ON EITHER THE LEFT OR RIGHT SIDE OF THE RS-1301 IN ORDER TO ACCOMADATE THE USER.

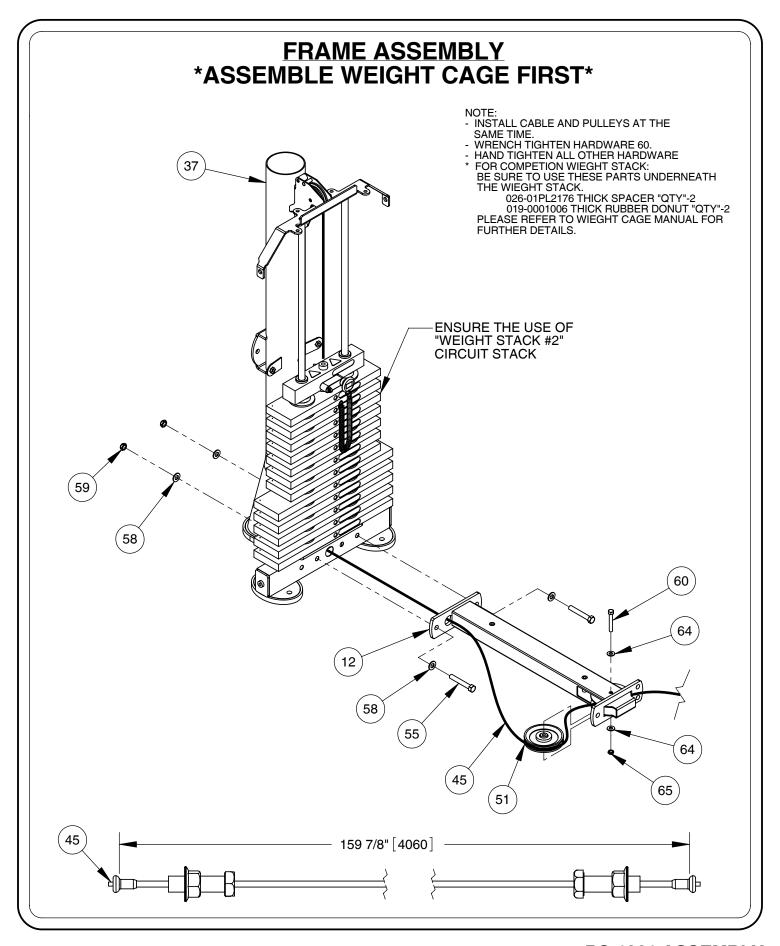



RS-1301 ASSEMBLY

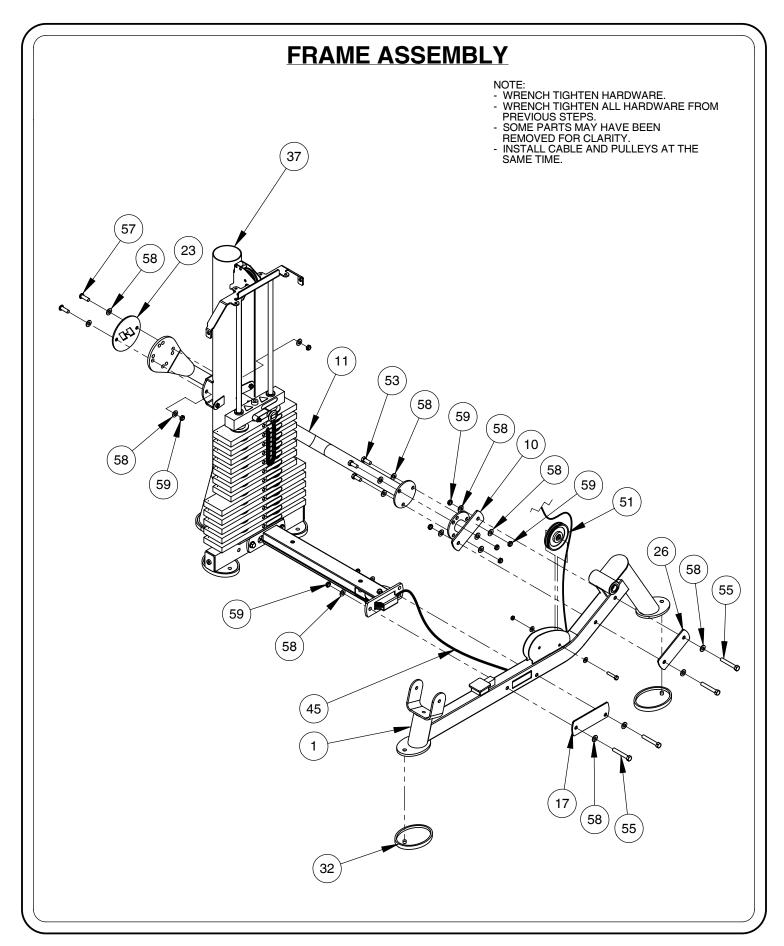


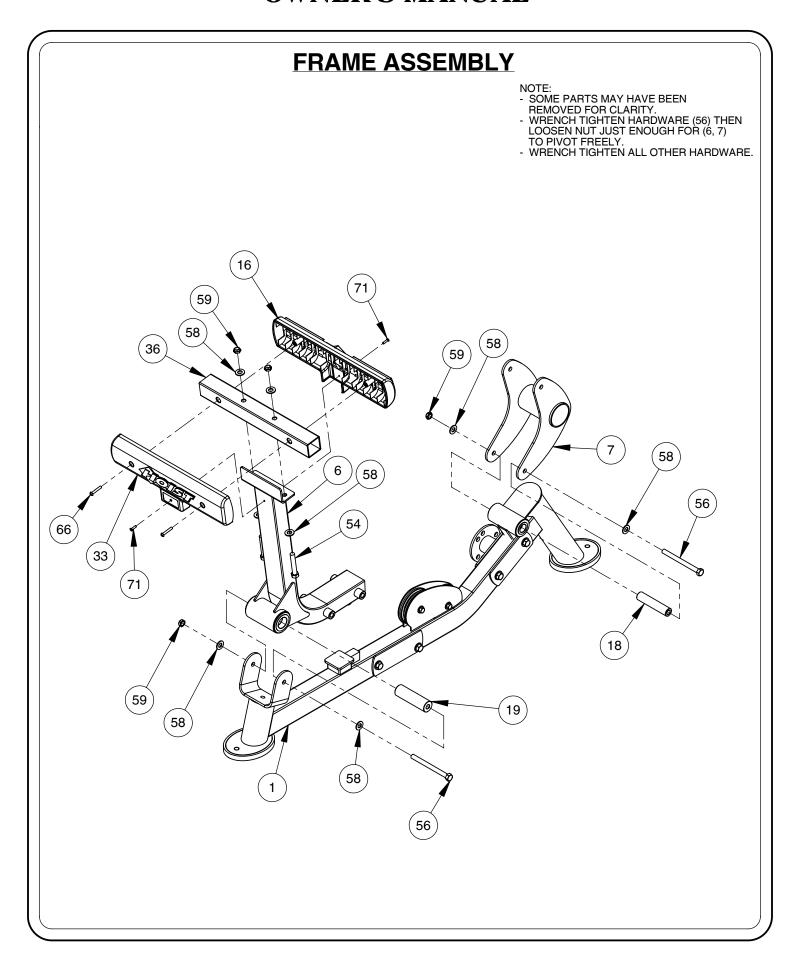

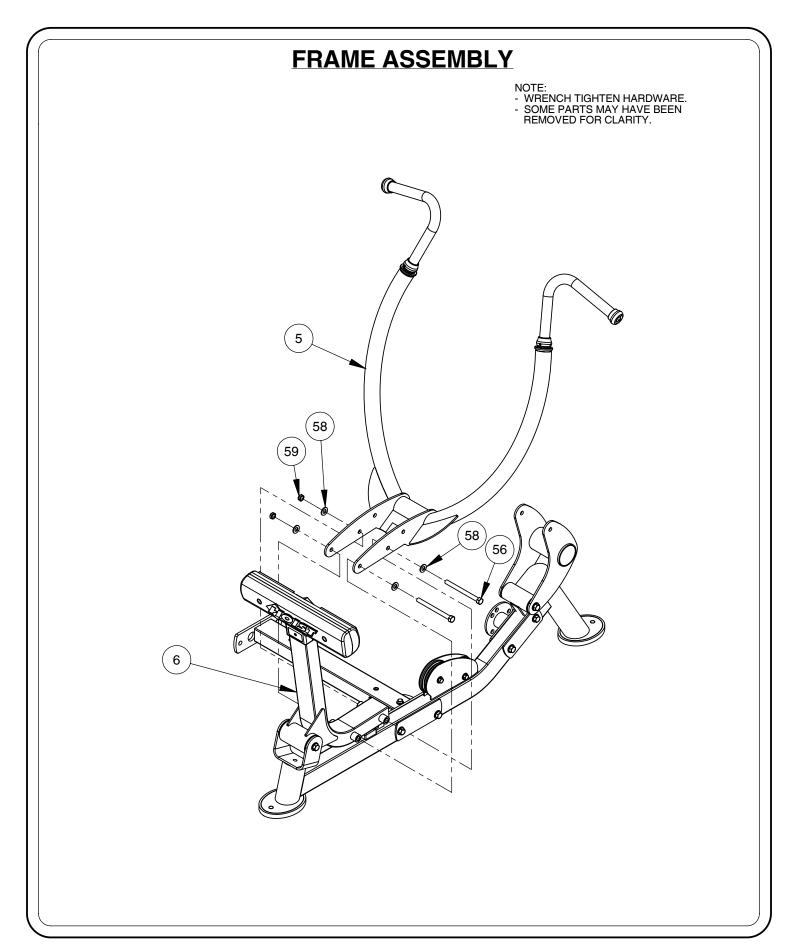


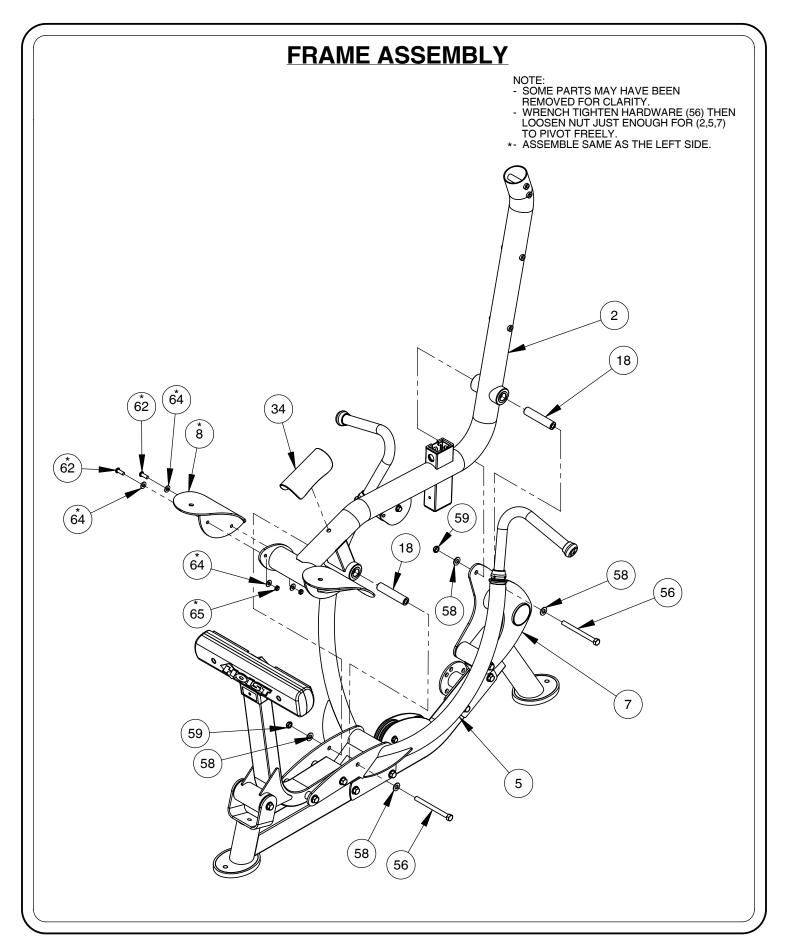


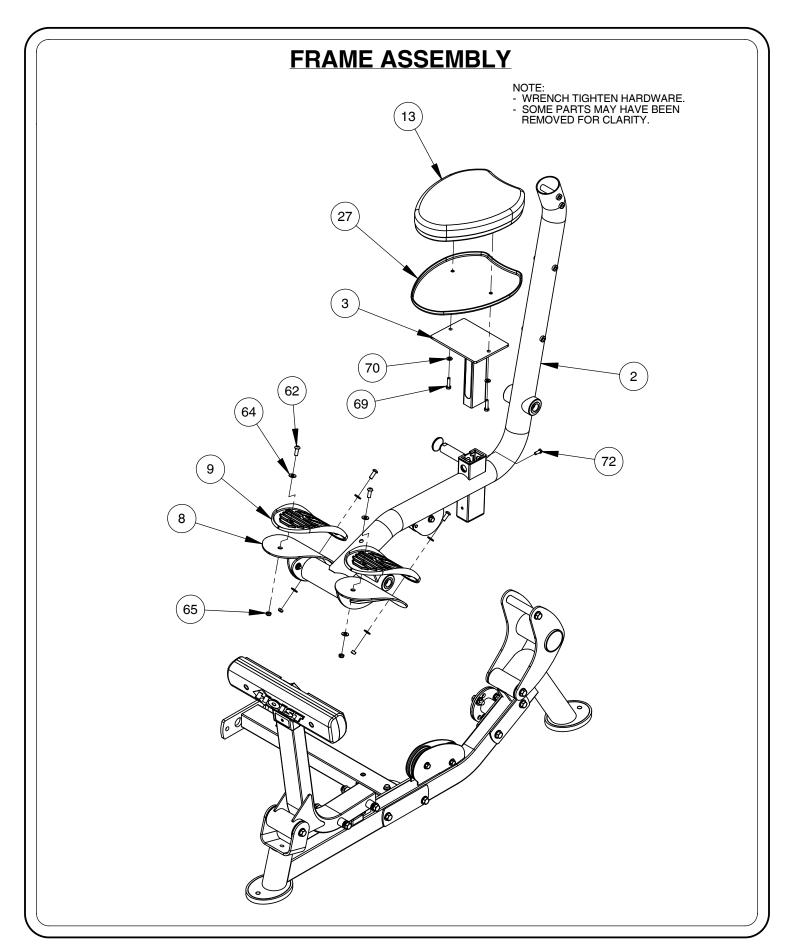


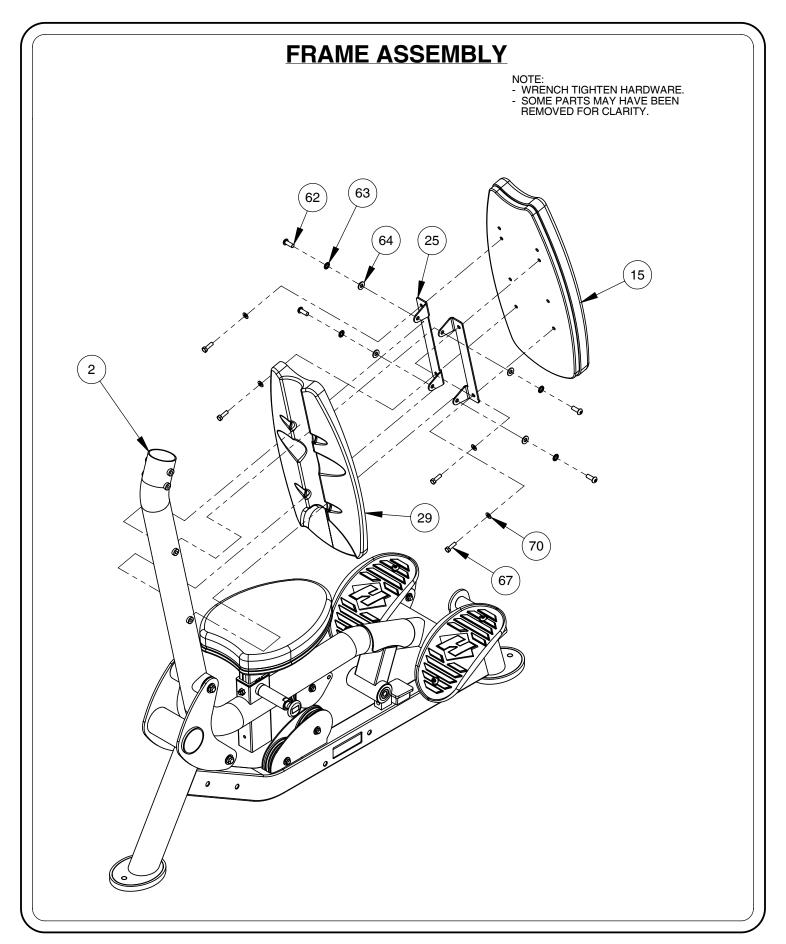


PAGE 11 RS-1301 ASSEMBLY

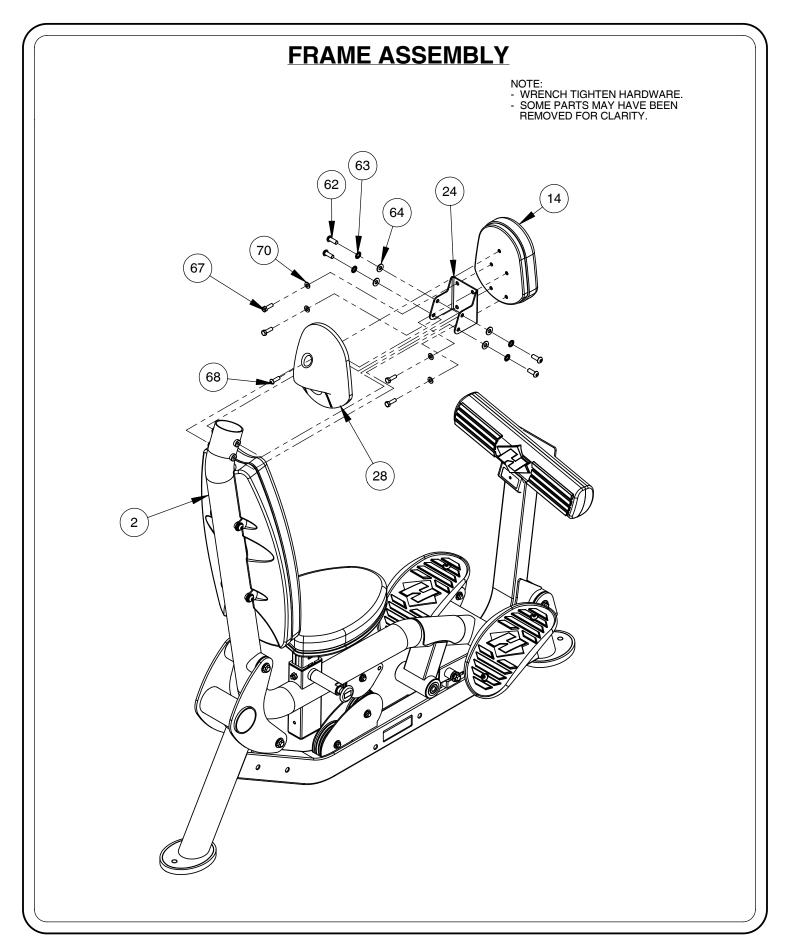

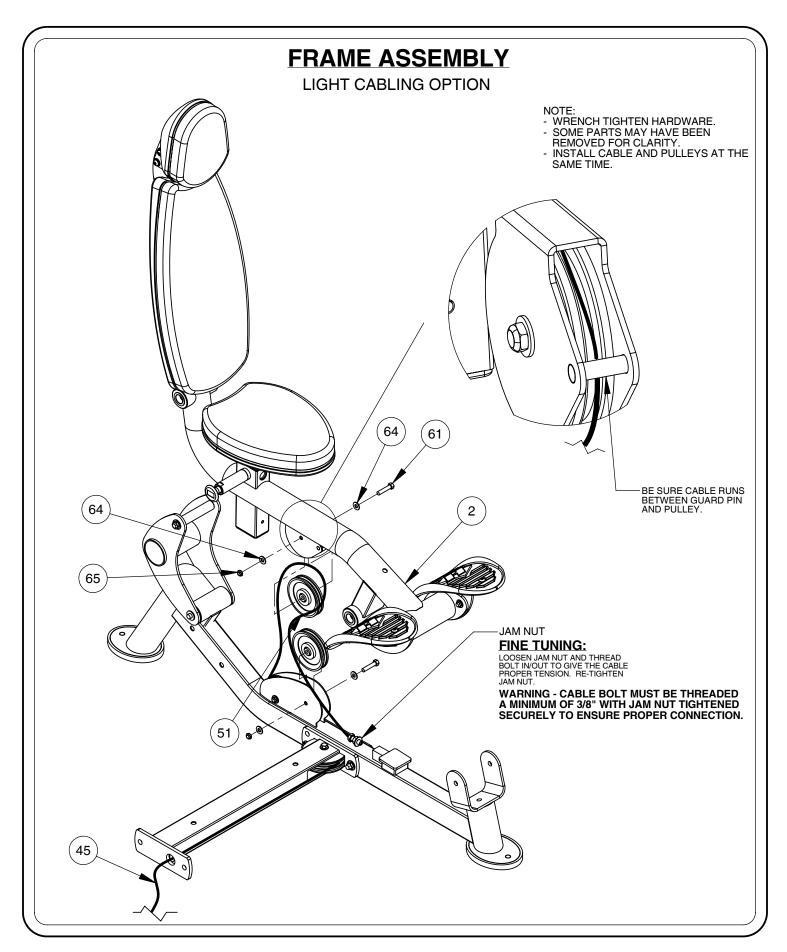


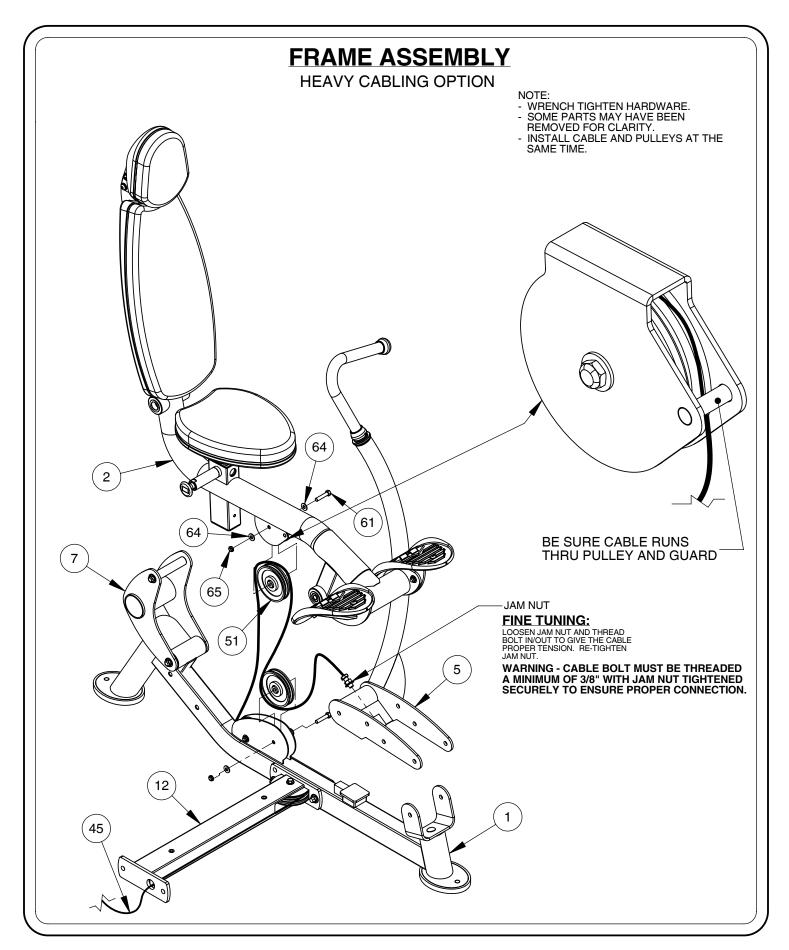


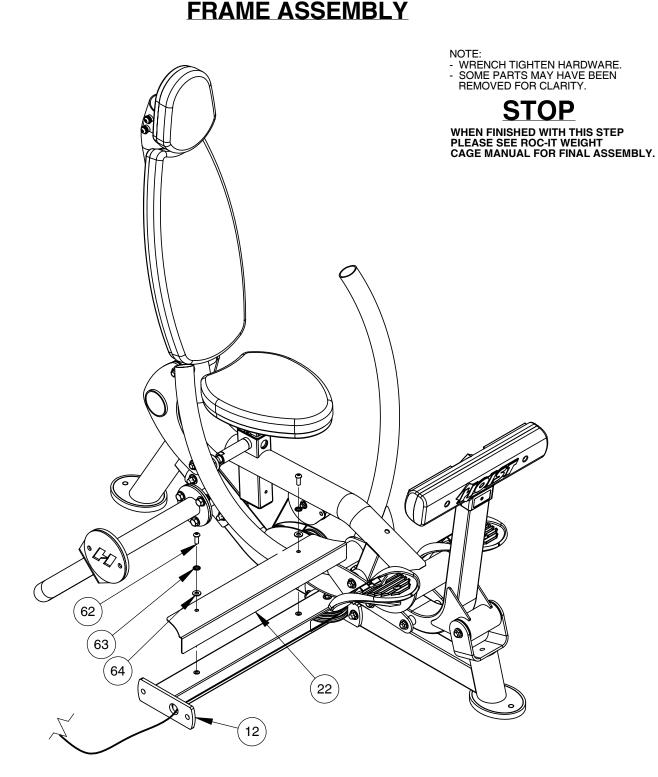


IMPORTANT

NOW THAT THE **RS-1301** MACHINE IS COMPLETELY ASSEMBLED TAKE TIME TO ASSURE THAT YOUR UNIT IS ASSEMBLED SQUARE AND PERPENDICULAR. IT MAY BE NECESSARY TO LOOSEN SOME FRAME HARDWARE TO RE-ALIGN THE FRAME AND RETIGHTEN BOLTS.

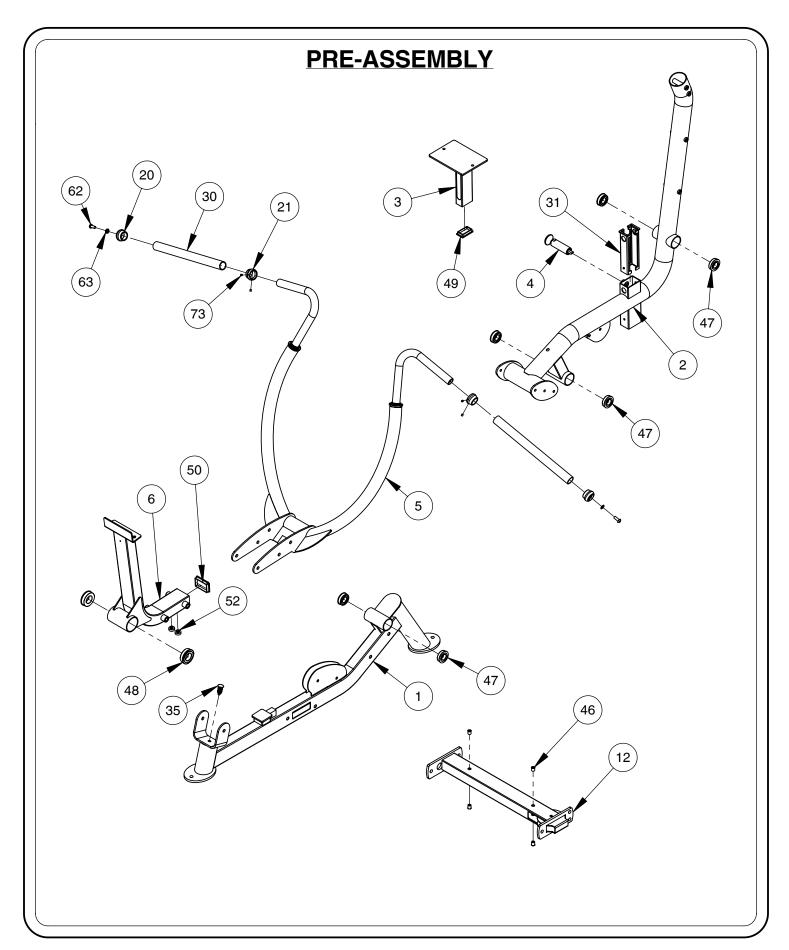

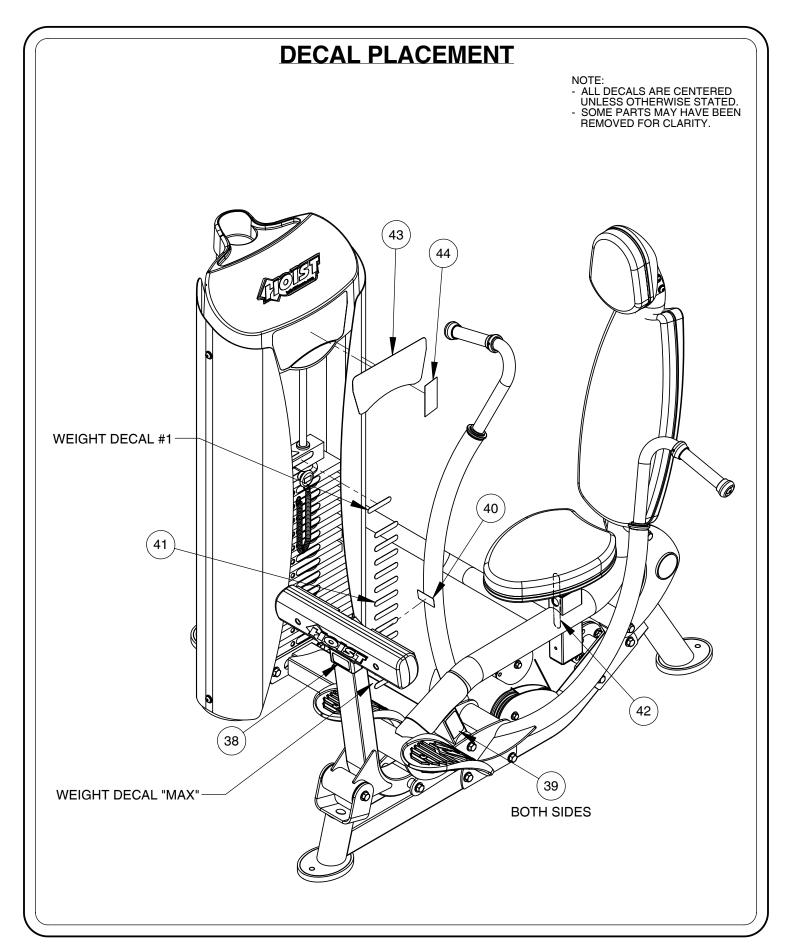

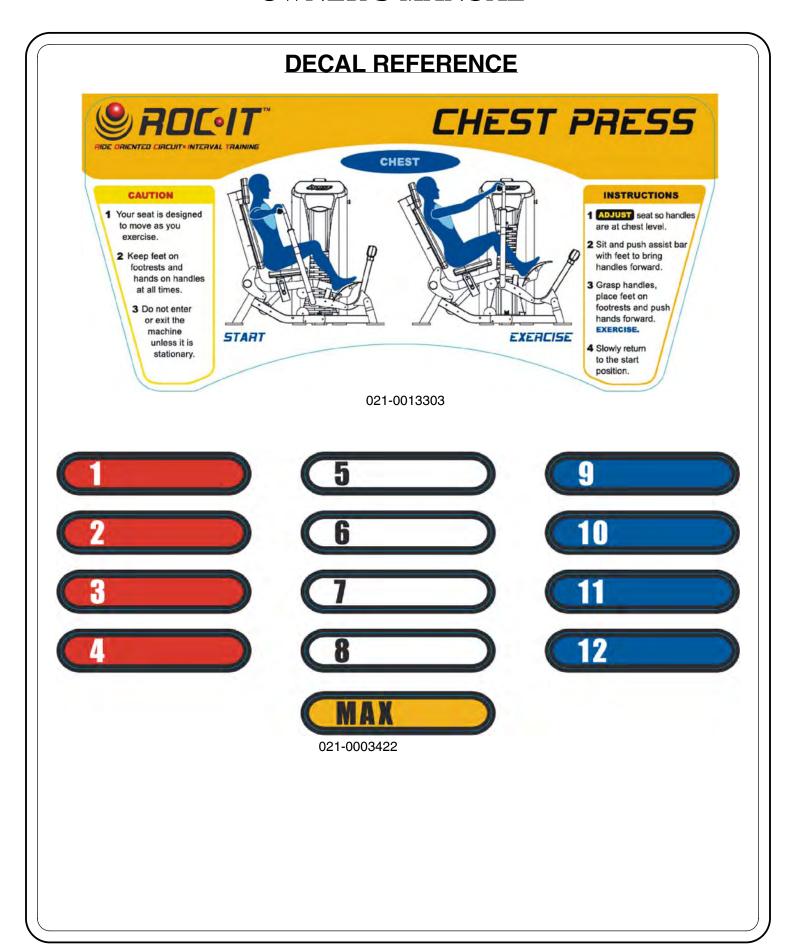

DECAL REFERENCE

1

2

3

4

5


6

7

021-0004032



021-0003113

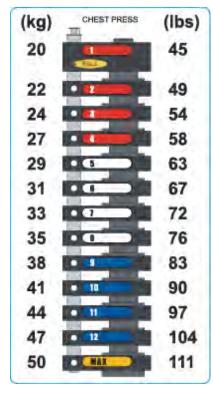

021-0003345



021-0003093



021-0003503

	NOTE: SOME OF	PART LIST THESE PARTS MAY COME PRE-INSTALLED			
TEM NO.	PART NUMBER	QTY			
1	026-01X3264	BASE FRAME ASSEMBLY	1		
2	026-01X3265	MAIN FRAME ASSEMBLY	1		
3	026-01X3259	SEAT ASSEMBLY	1		
4	026-01X2849	RACHET PULL-PIN ASSEMBLY	1		
5	026-01X3263	PRESS ARM ASSEMBLY	1		
6	026-01X2410	FOOT ASSIST ASSEMBLY			
7	026-01X2408	REAR LINK ASSEMBLY			
8	026-01X2975	FOOT PLATE MOUNT ASSEMBLY			
9	026-01X2402	FOOT PLATE ASSEMBLY			
10	026-01X2593	LINKAGE PLATE	1		
11	026-01X2592	CROSS BAR ASSEMBLY	1		
12	026-01X2377	CROSS MEMBER ASSEMBLY	1		
13	022-01PD2054-A	SEAT PAD ASSEMBLY			
14	022-01PD2055	UPHOLSTERED HEAD PAD			
15	022-01PD2058	UPHOLSTERED BACK PAD	1		
16	026-01X2860	PLASTIC FOOT ASSIST - 'H'	1		
17	026-01F0256	BACKING PLATE	1		
18	026-01M0660	SHAFT ∅ 1.00" X 4.69" LG.	3		
19	026-01M0920	SHAFT ∅1.38" X 4.69" LG.	1		
20	026-01M0932	Ø1.25" ID END CAP ALUMINIUM	2		
21	026-01M0933	Ø1.25" ID ALUMINUM RING	2		
22	026-01P2478	CABLE SHIELD	1		
23	026-01P2653	'H' PLATE	1		
24	026-01P2920	HEAD BRACKET MOUNT	1		
25	026-01P2925	PAD MOUNT BRACKET	2		
26	026-01P3021	BACKING PLATE	1		
27	022-01PD2054-5	PLASTIC BACKING	1		
28	022-01PD2055-5	PLASTIC BACKING	1		
29	022-01PD2058-5	PLASTIC BACKING	1		
30	026-01PL0235-30	GRIP Ø1.25" X 17.25" LG.	2		
31	026-01PL0125-125	E-Z GLIDE PLASTIC SLEEVE			
32	026-01PL2122	OVAL-SHAPED RUBBER FOOT	2		
33	026-01PL2148	PLASTIC FOOT ASSIST - 'HOIST'	1		
34	026-01PL2179	PLASTIC SCUFF GUARD	1		
35	026-01PL2200	PINETREE PLUG	1		
36	026-01T2968	FOOT ASSIST TUBE	1		
37	ROC-IT WEIGHT CAGE	ROC-IT WEIGHT CAGE	1		
38	021-0003093	DECAL MOVING PARTS (HORIZONTAL) 1			
39	021-0003113	DECAL PINCH POINT 1.63" X 3.25" (VERTICAL)	2		
40	021-0003503	DECAL "ASSIST BAR" 1			
41	021-0003422	DECAL ROC-IT WEIGHT STACK (1-12)			

PART LIST

NOTE: SOME OF THESE PARTS MAY COME PRE-INSTALLED

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.		
42	021-0004032	DECAL ADJUST 1-7 VERTICAL TXT.			
43	021-0013303	PLACARD ROC-IT-301 CHEST PRESS			
44	021-0003345	DECAL ROC-IT WEIGHT RATIO CHEST PRESS	1		
45	010-01C0359	CABLE ASSEMBLY RS-1301 - 159 13/16" LG.			
46	014-0014002	3/8-16 FLUSH MOUNT INSERT			
47	014-0009007	ϕ 1.00" I.D. FLANGED BALL BEARING			
48	014-0012010	ϕ 1.386" FLANGED BEARING	2		
49	016-0001003	END CAP 1.50" X 2.50" (BLACK)	1		
50	016-0201015	END CAP-F 2.00" X 3.00" (BLACK)	1		
51	018-0001003	ϕ 4.50" CABLE PULLEY	4		
52	019-0001001	PLUG BUMPER	2		
53	011-0107045	1/2"-13UNC X 1.25" HHB (WZ)	3		
54	011-0107030	1/2"-13UNC X 3.00" HHB (WZ)	2		
55	011-0107034	1/2"-13UNC X 3.25" HHB (WZ)	6		
56	011-0107036	1/2"-13UNC X 5.75" HHB (WZ)	6		
57	011-0101047	1/2"-13UNC X 1.50" BHCS (WZ)	2		
58	013-0102003	1/2" X 27mm SAE FLAT WASHER (WZ)	38		
59	012-0304011	1/2"-13 UNC THIN NYLOCK NUT (WZ)			
60	011-0107032	3/8"-16UNC X 2.50" HHB (WZ)			
61	011-0407020	3/8"-16UNC X 1.75" HHB (WZ)	3		
62	011-0101026	3/8"-16UNC X 1.00" BHCS (WZ)	20		
63	013-0102022	3/8" INTERNAL LOCK WASHER			
64	013-0402007	3/8" X 22mm FLAT WASHER (WZ)			
65	012-0104008	3/8"-16 UNC THIN NYLOCK NUT (WZ)			
66	011-0101023	1/4-20 UNC X 1.50" BHCS (WZ)			
67	011-0107029	5/16"-18UNC X 1.00" HHB (WZ)	8		
68	011-0101067	5/16"-18UNC X 1.00" BHCS (WZ)			
69	011-0107011	5/16"-18UNC X 1.25" HHB (WZ)			
70	013-0302008	5/16" SAE FLAT WASHER (WZ)			
71	011-0111009	M5 X 20mm FHB (WZ)			
72	011-0311013	3/8-16UNC X .75" SQUARE HEAD (WZ)			
73	011-0111008	SET SCREW: 1/4"-28 X 1/4" (WZ)			

ABBREVIATIONS

BZ = Black Zinc

WZ = White Zinc


HHB = Hex Head Bolt


FHCS = Flat Head Cap Screw


BHCS = Button Head Cap Screw


SHCS = Socket Head Cap Screw

SHSS = Socket Head Shoulder Screw

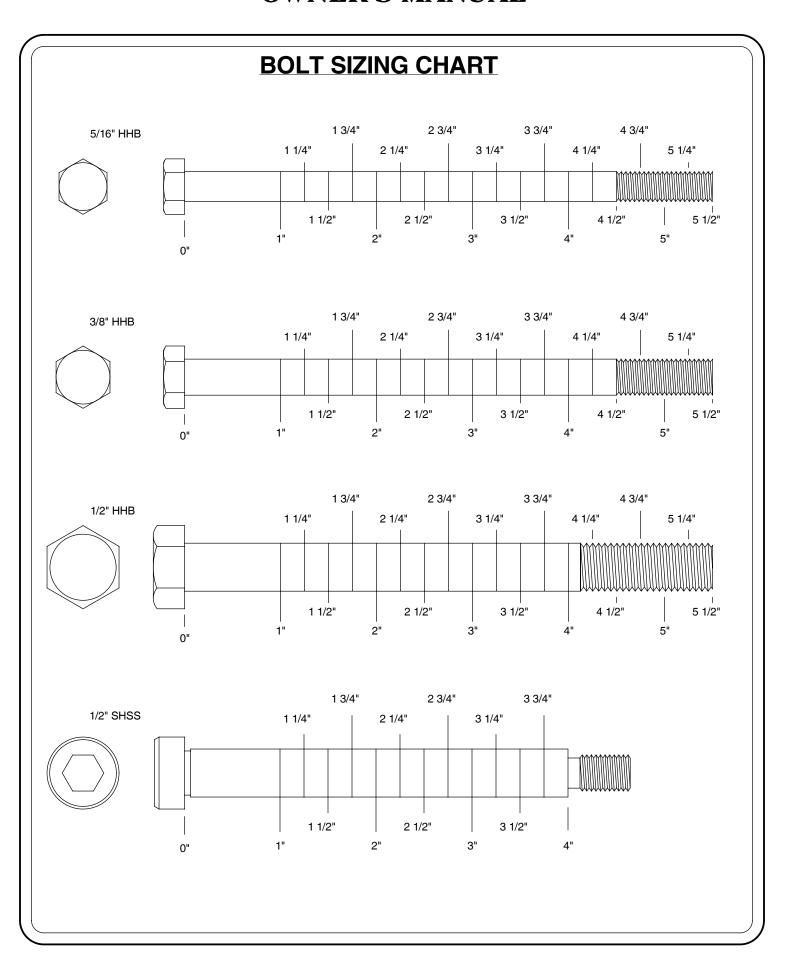

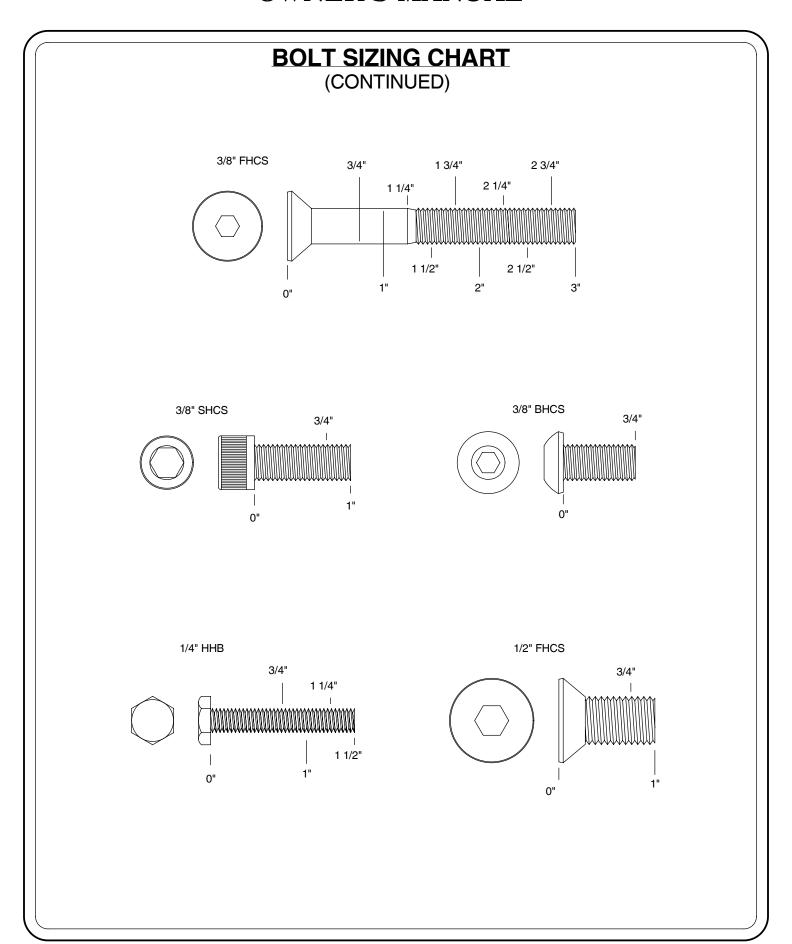

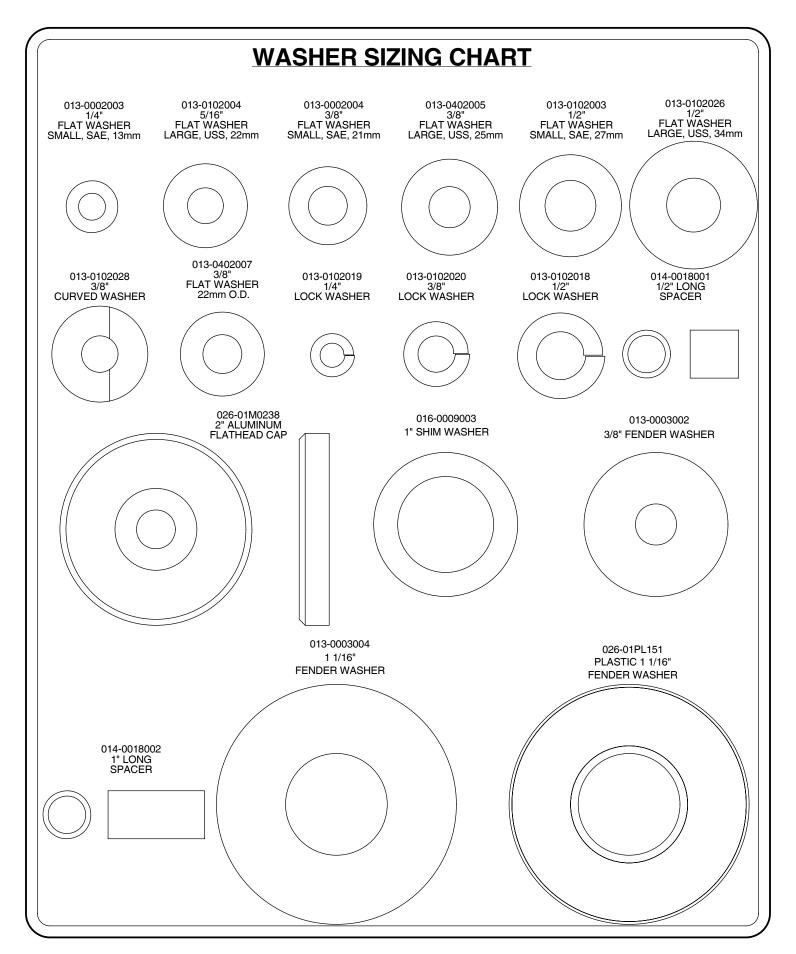

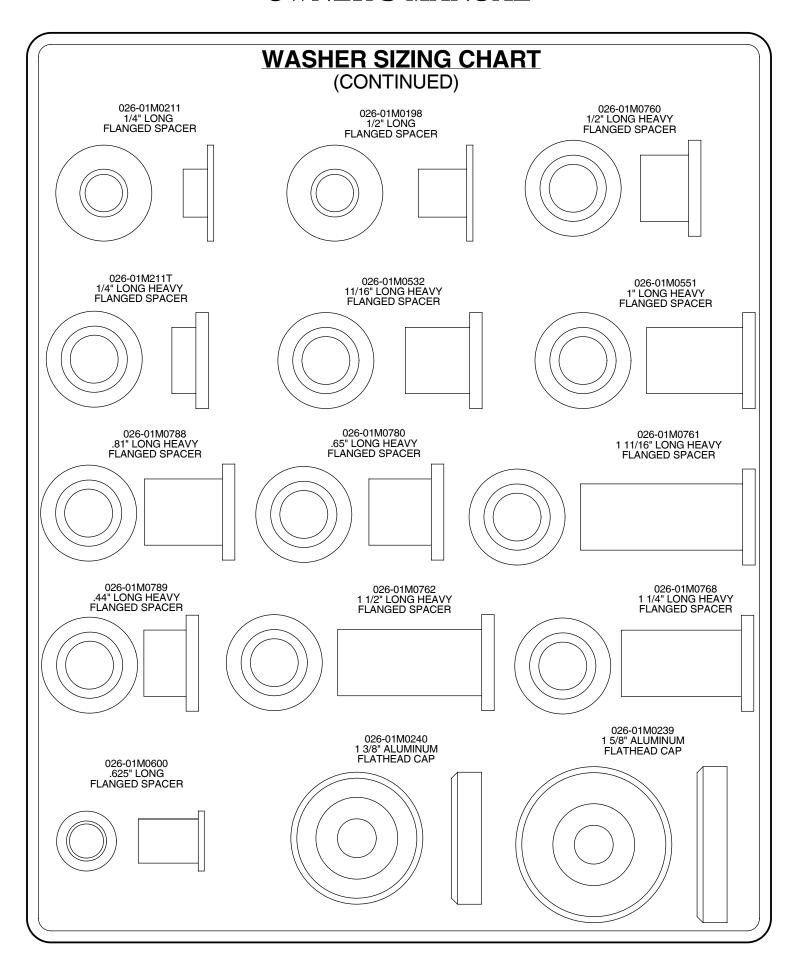

MAINTENANCE SCHEDULE

ROUTINE	COMMERCIAL MAINTENANCE	HOME MAINTENANCE	LATEST DATE ENTRY
Inspect; Links, Pull Pins, Snap Locks, Swivels, Weight Stack Pins	DAILY	WEEKLY	
Clean; Upholstery	DAILY	WEEKLY	
Inspect; Cables or Belts and their tension	DAILY	WEEKLY	
Inspect; Accessory Bars, and Handles	WEEKLY	3 MONTHS	
Inspect; All Decals	WEEKLY	3 MONTHS	
Inspect; All Nuts and Bolts, Tighten if needed	WEEKLY	3 MONTHS	
Inspect; Anti-Skid Surface	WEEKLY	3 MONTHS	
Clean & Lubricate; Guide Rods with a Teflon (PTFE) based lubricant (Superlube)	MONTHLY	3 MONTHS	
Lubricate; Seat Sleeves, Turcite Bushings, Linear Bearing	MONTHLY	3 MONTHS	
Clean and Wax; All Glossy Finishes	6 MONTHS	YEARLY	
Repack with Grease; Linear Bearings	6 MONTHS	YEARLY	
Replace; Cables, Belts and Connecting Parts	YEARLY	3 YEARS	

Your equipment comes with a commercial maintenance decal. For personal, in home use, please follow the home maintenance schedule listed above.

HOIST FITNESS SYSTEMS GENERAL MAINTENANCE INFORMATION

Links, Pull-Pins, Snap Hooks, Swivels, Weight Stack Pins:

- Check all pieces for signs of visible wear or damage.
- Check springs in snap hooks and pull-pins for proper tension and alignment.
- If the spring sticks or has lost its rigidity, replace it immediately.

Upholstery:

- To ensure prolonged upholstery life and proper hygiene, all upholstered pads should be wiped down with a damp cloth after every workout.
- Periodically take the time to use a mild soap or an approved vinyl upholstery cleaner to deter the onset of cracking or drying. Avoid using any abrasive cleaners or cleaners not intended for use on vinyl.
- Replace ripped or warn upholstery immediately.
- Keep sharp or pointed objects clear of all upholstery.

Decals:

 Inspect and familiarize yourself with any safety warnings or other user information posted on each decal.

Nuts and Bolts:

- Inspect all nuts and bolts for any loosening and tighten if needed.
- Go through a re-tightening sequence periodically to ensure that all hardware is tensioned proper.

Anti-Skid Surfaces:

 These surfaces are designed to supply secure footing and need to be replaced if they appear worn or become slippery.

Belts and Cables:

- Hoist uses only high quality belt, and mil-spec cables.
- Visually inspect the belts and cables for fraying, cracking, peeling or discoloration.
- While the machine is not in use, carefully run your fingers along the belt or cable to feel for thinning or bulging areas.
- Replace belts and cables immediately at the first signs of damage or wear. Do not use equipment until belts or cables have been replaced.

GENERAL MAINTENANCE INFORMATION

(CONTINUED)

Belt and Cable Tension:

- Referring to the Owners Manual, when belts or cables are used check all bolts attachments to be sure they are properly attached.
- Check slack in cables and re-adjust cable tension if needed.

Seat Sleeves, Guide Rods:

- Wipe down adjusting tubes with a dust free rag before applying lubricant.
- Lubricate seat sleeves and Guide Rods with a Silicon or Teflon based lubricant spray.

Linear Bearings:

Referring to the Owners Manual carefully disassemble the bearing from its housing and place a
finger full of light grease (lithium, super lube, etc.) into the inside of the bearing. Using your
finger, press the grease into the ball-bearings and their tracks. repeat until the ball-bearing
tracks are full of grease. Insert the shaft back into the bearing and wipe off excess grease.

PLEASE KEEP THIS FOR YOUR RECORDS

PAGE 29 RS-1301 ASSEMBLY

THIS PAGE WAS INTENTIONALLY LEFT BLANK.

WEIGHT TRAINING TIPS

Always consult your physician before starting any exercise program.

To be successful in your exercise program, it is important to develop an understanding of the basic principles of strength training. Now that you have your RS-1301 HOIST® Fitness System, it is only natural that you want to get started immediately. First, determine a set of realistic goals and objectives for yourself. By deciding on an exercise plan that is right for you prior to starting, you will contribute significantly to your success.

Warm up properly before engaging in weight resistance training. Stretching, yoga, jogging, calisthenics or other cardiovascular exercise can help prepare your body for the heavier workload of lifting weights.

Learn how to perform the exercise correctly before using heavy weight. Correct form is important to avoid injury and to ensure that you work the proper muscle groups.


Know your limitations. If you are new to weight training or are embarking on an exercise regimen after a long layoff, start slowly and build foundational strength over a longer period of time.

Pay attention to your breathing. Exhale when you exert is a general rule of thumb. Never hold your breath.


To gain maximum results and avoid possible injury, consult a fitness professional to develop your complete exercise program.

Enjoy your RS-1301 HOIST Fitness System!

WEIGHT RATIOS

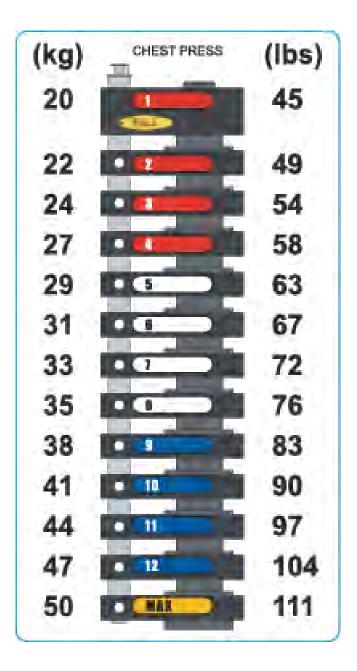

The above chart shows the standard weight stack for this unit. The weights listed are approximate. HOIST reserves the right to modify the machine without prior notice.

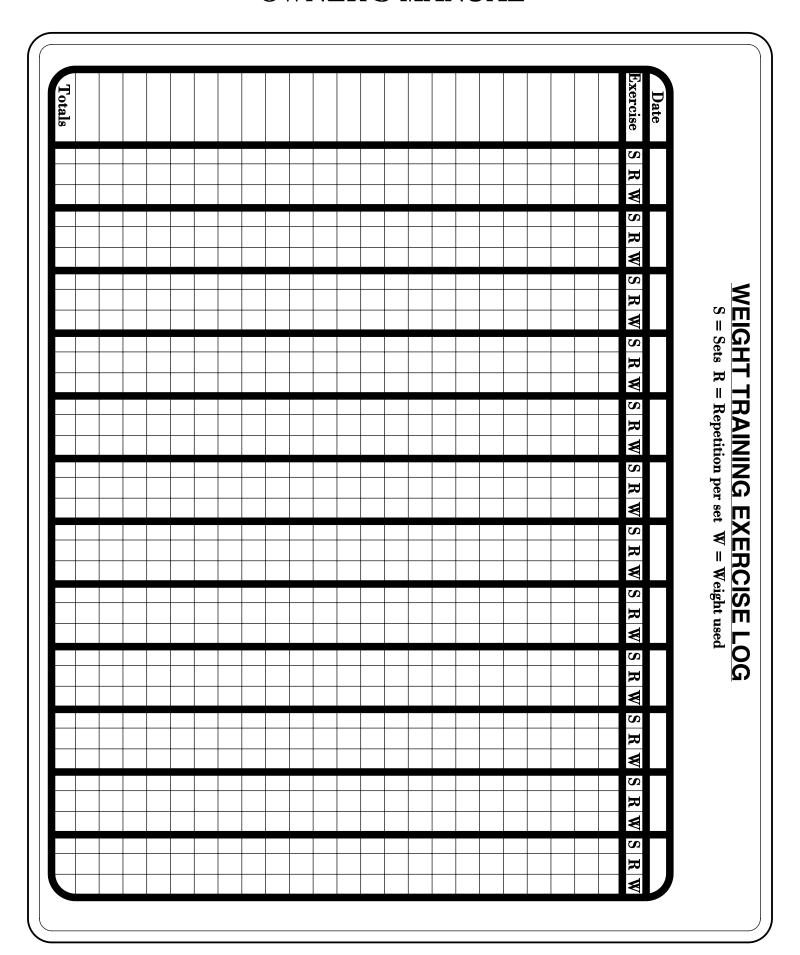

HOIST FITNESS SYSTEMS LIMITED LIFETIME WARRANTY

Hoist Fitness Systems warrants this product to the **original purchaser** to be free from defects in workmanship and/or materials under normal use or service. If at any time a component part is defective, Hoist Fitness Systems shall repair or replace it (at Hoist Fitness Systems option) within a reasonable period of time. This warranty does not cover costs of removal. transportation or reinstallation. This warranty shall not apply if the defect was caused by misuse, neglect or normal wear and tear

WARRANTY CLAIMS. All claims require: Model number, Serial number, Date of installation, and any information supporting the existence of the alleged defect.

To complete Warranty Registration visit: www.HOISTFITNESS.com and click on the Warranty Registration link

Starting from the original date of purchase, normal wear and tear shall be considered as the following:

COMMERCIAL USE: All malfunctions of upholstery, grips, paint, and chrome that occur after one year; all malfunctions of electronic components, belts, or cables after one year; all malfunctions of pulleys, bearings, or bushings that occur after five years. The frame and all welded components are warranted for the life of the product.

HOME USE: All malfunctions of grips, paint, and chrome that occur after ten years; all malfunctions of electronic components, belts, cables, or upholstery that occur after ten years; all malfunctions of pulleys, bearings, or bushings that occur after ten years. The frame and all welded components are warranted for the life of the product.

PLEASE NOTE THAT NOT ALL HOIST PRODUCTS ARE MADE FOR COMMERCIAL USE.

Refer to the instructions page of your owners manual or consult with you fitness product dealer to establish if a product is made for commercial use or not. Using a non-commercial product in a commercial setting can result in serious injury or death!

Hoist Fitness Systems sole responsibility shall be to repair or replace the component within the terms stated above. Hoist Fitness Systems shall not be liable for any loss or damage of any kind including any incidental or consequential damages resulting, directly or indirectly from any warranty expressed or implied or any other failure of this product.

WHAT IS NOT COVERED BY THIS WARRANTY

Hoist's sole obligation under this warranty is limited to either repair or replacement of parts, subject to the additions below. This warranty neither assumes nor authorizes any person to assume obligations other than expressly covered by this warranty.

NO CONSEQUENTIAL DAMAGES. Hoist is not responsible for economic loss; profit loss; or special, indirect, or consequential damages.

WARRANTY IS NOT TRANSFERABLE. This warranty is not assignable and applies only in favor of the original purchaser/user to whom delivered. Any such assignment or transfer shall void the warranties herein made and shall void all warranties, expressed, implied or statutory, except the one (1) and five (5) year warranties described above. These warranties are exclusive and in lieu of all other warranties, including implied warranty and merchantability or fitness for a particular purpose. There are no warranties which extend beyond the description on the face hereof.

TRANSPORTATION COSTS. Hoist will accept parts covered under this warranty freight collect, provided that shipment has received prior approval. Hoist is not responsible for any other transportation costs, but will ship freight collect parts either repaired or replaced under these warranties.

Hoist Fitness Systems 9990 Empire St. #130 San Diego, CA. 92126 (800)548-5438

PLEASE KEEP THIS FOR YOUR RECORDS